



Swivel Leg Leveler

- For use on all pinball legs.

Part no.	Description
23-0040-1	Leg leveler and nut
23-0043	Rubber shoe



Metal Swinging Target

Part no.	Description
GA14270	Swinging target



Flipper Shaft Bearing

Part no.	Description
GA25961	Used after 1991



Guide Rail Double Apron

- Can be made single apron by simple cutting.

Part no.	Description
GA9394R	1-1/2" red
GA9396W	2-1/8" white
GA9398B	2-1/2" blue
GA9398W	2-1/2" white



Rollover Button and Insert

Part no.	Description
BC900	Rollover star insert
BC901	Rollover star housing



Plastic Mini Roll-Over

- Available in white and yellow.

Part no.	Colour
GC15646W	1-1/2" white
GC15646Y	1-1/2" yellow
GC15647W	2" white



Target Blade

Part no.	Description
GA4345	Target blade



Popbumper Plunger

Part no.	Description
GA2663	Plunger



Plastic Hole Switch Arm

- Used with plastic hole switch base.

Part no.	Description
GC15708	Hole switch arm



Plastic Hole Switch Base

Part no.	Description
GC15707	Hole switch base



Coil Mounting Bracket

Replace GA4634.

Part no.	Description
GA17907	Coil mounting bracket



Shooter Rod

Part no.	Description
GA8833	Shooter rod only



Stand-up Target Switch Assy

- Available in colours: red - green and blue.

Part no.	Description
22-1034-2	Target red
22-1034-5	Target green
22-1034-6	Target blue



Universal Flipper Unit

- Can be used for most electronic flipper games.
- Available in 24V and 50V with large 78mm jumbo flipper.

Part no.	Description
GAS10L	Left unit 24V
GAS10R	Right unit 24V
GAS20L	Left unit 50V
GAS20R	Right unit 50V



Flipper and Shaft 78mm


- One piece moulded, flipper on steel shaft.

Part no.	Description
GA15531-12	Red transparent



Flipper and Shaft 55mm

Part no.	Description
GA21464	55mm flipper

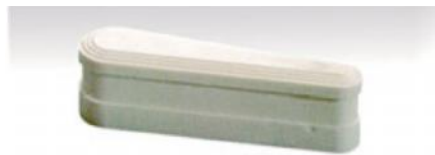

Jumbo Flipper Cap 78mm

Part no.	Description
GC13150	Flipper cap 78mm



Flipper Return Spring

Part no.	Description
GA779	Spring



Popbumper Ring and Rod

- Williams ref: A4754.

Part no.	Description
GA1316	Ring and rod



Complete Lever Arm Assy

- For left and right.

Part no.	Description
GA16362	Lever arm assembly



Flipper Base Plate

Part no.	Description
GC16354	Right base
GC16355	Left base



Flipper Button Switch

- With large tungsten contact points.

Part no.	Description
GB17838	Flipper switch



Flipper Switch Assembly

- With large tungsten contact points.

Part no.	Description
GA16363	Flipper switch



Coil Stop and Bracket

Part no.	Description
GA29154	Coil stop



Coil Stop and Bracket

Part no.	Description
GA17908	Coil stop



Lever Arm

- For all models after 1991.


Part no.	Description
GA26013	Lever arm right
GA26014	Lever arm left



Flipper Link and Plunger

- For all models after 1991.

Part no.	Description
GA25956	Link and plunger

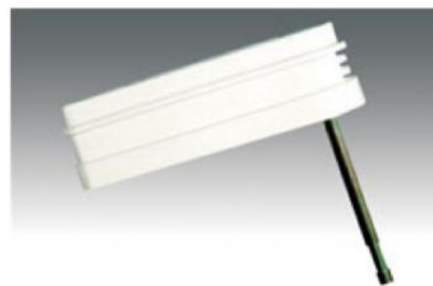

Flipper and Shaft

- For all models after 1991.
- Replace: GA26497 and GA25972

Part no.	Description
GA25972-1	Flipper shaft



Fibre Yoke

Part no.	Description
GA2662	Fibre yoke



Metal Yoke


- Extra strong, for all popbumpers.

Part no.	Description
GA12149	Metal yoke



Nylon Swinging Target

Part no.	Description
GA17175	Swinging target

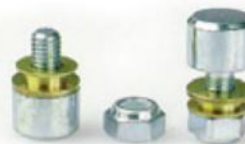

Replacement Coil Stop

- Coil stop including lock nut. 8mm high.
- Used for Bally and Gottlieb.

Part no.	Description
GA17183-1	Coil stop



Leg-Bolt Mounting plate

Part no.	Description
GA97	Mounting plate



Teflon Sleeves

Part no.	Description
10-0059	12.5 x 33mm
10-0060	12.5 x 43mm
10-0061	12.5 x 44.5mm
10-0621	12.5 x 56mm
23-0058	12.5 x 68mm



Leaf Switch

Part no.	Description
GA28693	Leaf switch



Flipper Switch

- Used after 1991.
- Replace GA26437, GA26438 and GA26439.


Part no.	Description
GA26438-1	Switch L/R



Popbumper Switch

- With large tungsten contact points.

Part no.	Description
GB18089	Shown
GB18090	Opposite

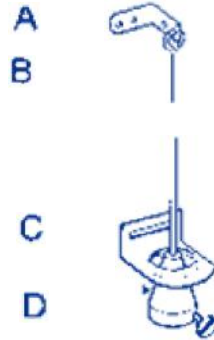

Tilt Assembly

Part no.	Description
BP7783-1000	A. Tilt hanger
BM175	B. Wire
BP7750	C. Contact ring
BE138-3	D. Tilt bob



Gottlieb Coils


Part no.	Description
GA4893	Pop. coil
GA5194	Kicker coil
GA16570	Ball ret.coil
GA17875	Flipper coil
GA17891	Bank coil
GA20095	Flipper coil
GA24161	Flipper coil
GA25959	Coil
GA26450	Coil
GA26451	Coil
GA26646	Coil



Gemini CP-100 Playfield Cleaner and Polish

- Excellent for playfields, poolballs, rubber rings etc
- Content: 235ml

Part no.	Description
H29-1051-00	Playfield cleaner and polish

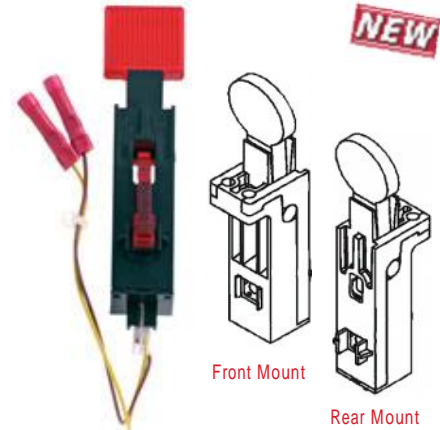

Pinball Target Switches

- Universal replacement target switch for use on both new and old pinball machines
- No adjustment required throughout the life of the target
- Repetitive operating point
- 50,000,000 cycle typical switch life
- Shock, dust and dirt resistant
- Integrated electrical connector
- Only the target head protrudes above the playing field
- Translucent target heads illuminate brilliantly
- Includes mounting screws, wire harness and installation instructions


HEAD TYPE:
See Head Type Chart
(1,2,3,4,5)

KIT:
K= with installation kit
= without installation kit

H46- **M** **H** 10- **C** **K**

MOUNTING:
F = Front
R = Rear

COLOUR:
10T = Red translucent
12T = Blue translucent
13T = Green translucent
13FT = Green fluorescent translucent
14T = Purple translucent
15T = Yellow translucent
17T = Amber translucent
18 = Clear translucent
19T = Orange translucent

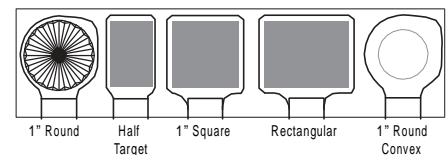

Installation Kit Includes the necessary items needed to replace existing older style pinball targets (2 Mounting Screws, Wire Harness and Instructions)

Part no.	Description
H46-MH10-CK	Pinball target switch w/installation kit




Replacement Williams Pinball Switches

NEW



Switch Assy WMS DA41 Type

Part no.	Williams P/N	Description
H95-1895-00	5647-10915-00	Switch assy WMS DA3 type

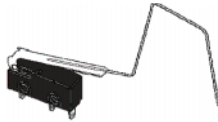


Switch Assy WMS DA3 Type

Part no.	Williams P/N	Description
H95-1893-00	5647-12073-37	Switch assy WMS DA3 type



Switch Assy WMS DA3 Type

Part no.	Williams P/N	Description
H95-1889-00	5647-12693-01	Switch assy WMS DA3 type

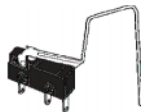


Switch Assy WMS DA3 Type

Part no.	Williams P/N	Description
H95-1122-00	5647-12693-04	Switch assy WMS DA3 type



Switch Assy Ball Detect

Part no.	Williams P/N	Description
H95-4142-00	5647-12693-06	Switch assy Ball Detect

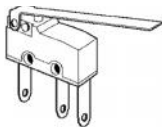

Switch Assy Outhole W/O Diode

Part no.	Williams P/N	Description
H95-4141-00	5647-12693-07	Switch assy Outhole W/O Diode



Switch Assy WMS DA3 Type

Part no.	Williams P/N	Description
H95-1888-00	5647-12693-08	Switch assy WMS DA3 type



Switch Assy WMS DA3 Type

Part no.	Williams P/N	Description
H95-0949-00	5647-12693-11	Switch assy WMS DA3 type



Switch Assy WMS DA3 Type

Part no.	Williams P/N	Description
H95-0957-00	5647-12693-13	Switch assy WMS DA3 type



Switch Assy WMS DA3 Type

Part no.	Williams P/N	Description
H95-1125-00	5647-12693-14	Switch assy WMS DA3 type



Switch Assy WMS DA3 Type

Part no.	Williams P/N	Description
H95-0944-00	5647-12693-19	Switch assy WMS DA3 type



Switch Assy WMS DA3 Type

Part no.	Williams P/N	Description
H95-0963-00	5647-12693-21	Switch assy WMS DA3 type



Switch Assy WMS DA3 Type

Part no.	Williams P/N	Description
H95-0958-00	5647-12693-24	Switch assy WMS DA3 type



Switch Assy WMS Rollover

Part no.	Williams P/N	Description
H95-1128-00	5647-12693-25	Switch assy WMS rollover



Switch Assy WMS DA3 Type

Part no.	Williams P/N	Description
H95-0979-00	5647-12693-31	Switch assy WMS DA3 type



Switch Assy WMS Lane Switch

Part no.	Williams P/N	Description
H95-0945-00	5647-12693-32	Switch assy WMS lane switch



Switch Assy WMS DA3 Type

Part no.	Williams P/N	Description
H95-0946-00	5647-12693-36	Switch assy WMS DA3 type



Switch Assy WMS Upkicker

Part no.	Williams P/N	Description
H95-1131-00	5647-12693-55	Switch assy WMS upkicker



Switch Assy WMS DA3 Type

Part no.	Williams P/N	Description
H95-1938-00	5647-12693-62	Switch assy WMS DA3 type



Switch Assy WMS DA3 Type

Part no.	Williams P/N	Description
H95-0947-00	5647-12693-66	Switch assy WMS DA3 type



Switch Assy WMS DA3 Type

Part no.	Williams P/N	Description
H95-0948-00	5647-12693-69	Switch assy WMS DA3 type



Flipper Crank Assembly

- Williams ref: 13882-L/R.
- For all models after 1992.

Part no.	Description
122AS0001	Left crank
122AS0002	Right crank



Flipper Crank Assembly

- Williams ref: B9937-L/R. A10655L/R.
- For all model before 1992.

Part no.	Description
122AS0016	Left crank
122AS0017	Right crank



Big Shot Assembly

- Williams ref: A14098.

Part no.	Description
WA14098	Big shot assembly



Bracket

- For retaining spring.
- Williams ref: 01-9376.

Part no.	Description
122P0011	Bracket



Flipper Link

- Williams ref: 03-8050.

Part no.	Description
122C0005-1	Flipper link



Flipper Link

Part no.	Description
122C0008	Flipper link



Lift Crank Assembly

- For ramp lifting mechanism B11304.

Part no.	Description
WA11137	Lift crank assembly



Swinging Target

- Williams ref: A7861

Part no.	Description
GA14270	Swinging target



Battery Holder

Part no.	Description
W5A9021	Battery holder




Link

Part no.	Description
W1A4251	Link



Plunger Link


Part no.	Description
545-5069-00	Link

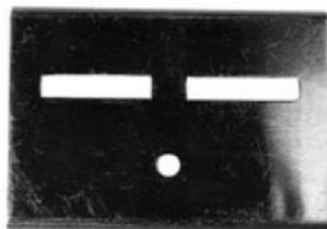

Reset Plate for Target

- Williams ref: 1-6452.

Part no.	Description
W1B6452	Reset plate

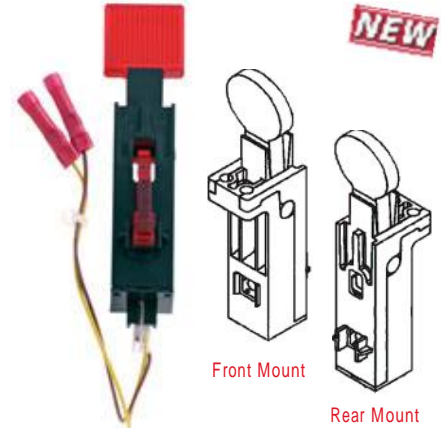

Pinball Target Switches

- Universal replacement target switch for use on both new and old pinball machines
- No adjustment required throughout the life of the target
- Repetitive operating point
- 50,000,000 cycle typical switch life
- Shock, dust and dirt resistant
- Integrated electrical connector
- Only the target head protrudes above the playing field
- Translucent target heads illuminate brilliantly
- Includes mounting screws, wire harness and installation instructions


HEAD TYPE:
See Head Type Chart
(1,2,3,4,5)

KIT:
K= with installation kit
= without installation kit

H46- **M** **H** 10- **C** **K**

MOUNTING:
F = Front
R = Rear

COLOUR:
10T = Red translucent
12T = Blue translucent
13T = Green translucent
13FT = Green fluorescent translucent
14T = Purple translucent
15T = Yellow translucent
17T = Amber translucent
18 = Clear translucent
19T = Orange translucent

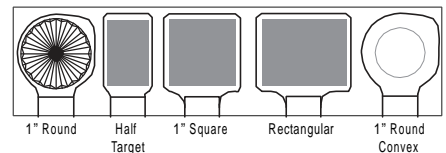

Installation Kit Includes the necessary items needed to replace existing older style pinball targets (2 Mounting Screws, Wire Harness and Instructions)

Part no.	Description
H46-MH10-CK	Pinball target switch w/installation kit



Mounting Bracket

- For ball eject assembly B9361.
- Williams ref: A6950L/R

Part no.	Description
122AS0008	Left mounting bracket
122AS0009	Right mounting bracket



Flipper Crank

- Williams ref: 1A8073-L/R.

Part no.	Description
122A0001	Left crank
122A0002	Right crank



Metal Cover for Plastic Cash-Box

- Metal cover with one hole.

Part no.	Description
535-5013-02	Cover ref: 01-10021



Plunger and Link Assembly

- Williams ref: A10656.
- For crank 122AS0001 and 122AS0002.

Part no.	Description
122AS0013	Plunger and link



Flipper Plunger and Link

- Williams ref: A15847

Part no.	Description
122AS0021	Plunger and link



Plunger and Link

- Williams ref: 3A8085 - 2A2364.

Part no.	Description
122AS0022	Plunger and link



Plunger and Link

- Williams ref: A5103 and A8050-1.

Part no.	Description
515-5338-00	Plunger and link



Plunger and Link Assy

- For crank 122AS0016 and 122AS0017.

Part no.	Description
515-5052-00	Plunger and link



Plunger

- Williams ref: A6306-2. Length: 82mm.

Part no.	Description
122AS0010	Plunger



Kicker Plunger

- Williams ref: A15370. Length: 78mm.

Part no.	Description
WA15370	Plunger



Ball Popper Plunger

- For models after 1989.
- Williams ref: A11336. Length: 100mm.

Part no.	Description
122AS0005	Ball popper plunger



Plunger

- Williams ref: 2A4668. Length: 98mm.

Part no.	Description
W2A4668	Plunger



Plunger

- Williams ref: A13270. Length: 86mm.

Part no.	Description
WA13270	Plunger



Popper Plunger

- WA15709. Length: 108mm.

Part no.	Description
WA15709	Popper plunger



Rollover Stern Assembly

- Williams ref: Star insert 3-9965 / 3A7537.
- Rollover housing: 3A7538.

Part no.	Description
BC900	Rollover star insert
BC901	Rollover star housing



Gemini CP-100

Playfield Cleaner and Polish

- Excellent for playfields, poolballs, rubber rings etc
- Content: 235ml

Part no.	Description
H29-1051-00	Playfield cleaner and polish



Pad Blue Rubber

- Williams ref: 23-6629.

Part no.	Description
W23A6629	Pad rubber



T-nut


Part no.	Description
BM108-9	8/32" T-nut
BM108-15	6/32" T-nut
BM108-21	10/32" T-nut



Popbumper Spring

- Williams ref: 10-135. & 10-300.

Part no.	Description
W10A135	10-135 spring
GA590	10-300 spring

 

Plunger Spring

- Williams ref: 10-376.

Part no.	Description
122SP0001	Spring



Ball Kicker Spring

- Williams ref: 10-128.

Part no.	Description
122SP0002	Spring



Target Retractor Spring

- For single drop target unit D19612.
- Williams ref: 10-362.

Part no.	Description
122SP0003	Spring



Flipper Return Spring

- Williams ref: 10-364.


Part no.	Description
122SP0005	Spring



Outside Shooter Spring

- Williams ref: 10-149.

Part no.	Description
BSP247	Outside shooter spring

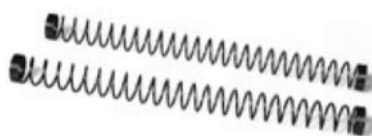

Inside Shooter Spring

- Williams ref: 10-148.

Part no.	Description
BSP200-24	Inside shooter spring (10-148)



Drop Target

- For single drop target assembly.
- Williams ref: C11546, Colour black.
- Used in Millionaire, etc.
- Williams ref: 03-8033 and 03-8750.

Part no.	Description
122C0003	Drop target



Drop Target

- Williams ref: 03-8036.

Part no.	Description
W3A8036	Drop target



Drop Targets

- Williams ref: A8146-XX.

Part no.	Description
122C0002-2	Red target
122C0002-4	Yellow target



Phototransistor

- Receiver used in ball detector boards for all latest models.

Part no.	Description
WR001	Receiver



Led

- Transmitter used in ball detector boards for all latest models.

Part no.	Description
WT001	Transmitter



Photo Transistor Board

- Williams ref: A14231, A14315 and A16909.

Part no.	Description
122AS0019	Photo transistor board



LED Board

- Williams ref: A14316, A14232 and A16908.

Part no.	Description
122AS0020	LED board



Return Lever

- For later '89 Williams coin doors.

Part no.	Description
W27A1082	Return lever



Pinball legs

- Extra strong
- Chrome
- Universal use
- Sold per set of 4 pcs.
- Williams ref: A19514.

Part no.	Description
535-5020-99	Legs set



Swivel Leg Leveller

- For use on all pinball legs.
- Williams ref: 08-7377.

Part no.	Description
23-0040-1	Leg leveller



Rubber Shoe

- For above leg levellers.

Part no.	Description
23-0043	Rubber shoe



Coin Entry

- For later '89 Williams coin doors.

Part no.	Description
W27A1026-X	Entry

X=Specify coinage



Hyperball Target

Part no.	Description
WB9122	Hyperball target



Coil Stop

- Extra strong. Williams ref: A10280.

Part no.	Description
122A0003	Coil stop



Coil Stop

- Williams ref: A10821 and A12111.

Part no.	Description
122A0004	Coil stop



Coil Stop

- Williams ref: A7414 / A8143.

Part no.	Description
122A0008	Coil stop



Coil Stop

- Williams ref: A12390.

Part no.	Description
122A0009	Coil stop 8.5mm high



Teflon/Nylon Sleeves


Part no.	Description
10-0059	12.5 x 33mm
10-0060	12.5 x 43mm
10-0061	12.5 x 44.5mm ref: 03-7066
10-0621	12.5 x 56mm ref: 03-7066-5



Coloured Lamp Caps


- Fit on all 10mm lamps.
- Williams ref: 03-8063.

Part no.	Description
-10013-2	Red cap
-10013-3	Orange cap
-10013-4	Yellow cap
-10013-5	Green cap
-10013-6	Blue cap

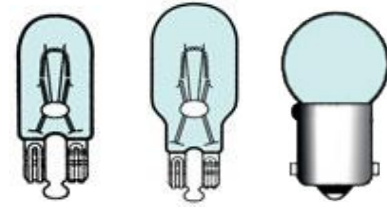 


Replacement Lamps for Williams

Part no.*	Williams Lamp no.	Will. ref.
-2501	#555	24-8768
-44	#44	24-6549
-89	#89	24-8704
-906	#906	24-8802
-9051	#1251	24-8774
-63	#63	24-6551
-8170		24-8771

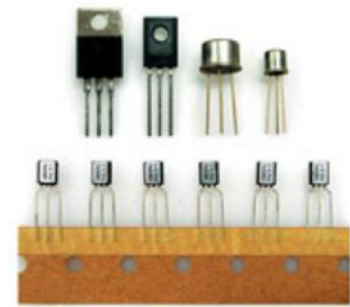 

Transistors / Thyristors


Part no.	Williams ref.	Description
2N4401	5C8939	NPN transistor
2N4400	5C9016	NPN transistor
2N5401	5C9055	Si PNP transistor
BD243A	5C8979	NPN transistor
TIP122	5A8977	NPN transistor
2N5064	5A9014	Thyristor

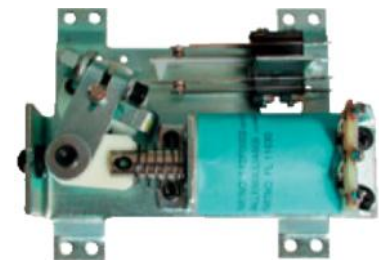 

Flipper Assy's old model with 10-376 plunger spring

- L indicates left flipper unit.
- R indicates right flipper unit.

Part no.	Ref.	Coil
122AS0011	C11626L	FL11630
122AS0012	C11626R	FL11630

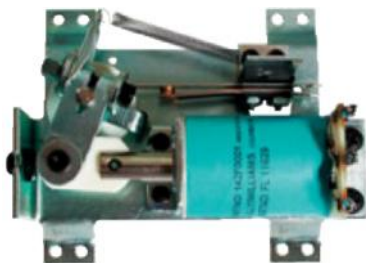 

Flipper Assy's later model with 10-362 return spring

- L indicates left flipper unit.
- R indicates right flipper unit.

Part no.	Ref.	Description
122AS0023	15849L	FL11630
122AS0024	15849R	FL11630
122AS0027	15849L2	FL11629
122AS0028	15849R2	FL11629
122AS0031	15849L4	FL15411
122AS0032	15849R4	FL15411



Coils

Replacement for Williams flipper coils with diode

Part no.	Williams ref.
142F0001	FL11629
142F0002	FL11630
142F0003	FL11722
142F0004	FL11753
142F0005	FL15411
142F0011	SFL23-600/30-2600

Replacement coils with diode for Williams

Part no.	Williams ref.
142A0002	AE23-800-01
142A0003	AE23-800-02
142A0004	AE23-800-03
142A0007	AE23-800-06
142A0008	AE23-800-11
142A0009	AE23-800-12
142A0012	AE24-900-02
142A0018	AE26-1500-01
142A0025	AL23-800-01
142A0038	SA3-24-750
142A0039	SA3-25-900
142A0042	SA6-24-750DC

Replacement coils without diode for Williams

Part no.	Williams ref.
142F0020	A14789
142A0001	AE23-800
142A0010	AE24-900
142A0014	AE25-1000
142A0015	AE26-1200
142A0017	AE26-1500
142A0021	AE27-1200
142A0024	AE30-2000
142B0001	B1-26-800



Key Hook

- Williams ref: 12A6230.

Part no.	Description
BM389-1	Key hook



Optocoupler

- For target assembly: C11212-2 / C11223-X and C11546.
- Williams ref: 5490-10159.

Part no.	Description
ISO4	Optocoupler TCST1103



Coil Mounting Bracket

- Williams ref: A6064.


Part no.	Description
GA17907	Coil mounting bracket



Mounting Bracket

- Special for ball kicker unit.

Part no.	Description
WA5653	Mounting bracket

 

Teflon Sleeve

- For shooter housing 21-6645.
- Williams ref: 03-7357.

Part no.	Description
10-0448	Teflon sleeve



Flipper Bushing

- Williams ref: 03-7568.


Part no.	Description
122C0001	Flipper bushing



Ball Shooter Assembly

- Williams ref: B7592.

Part no.	Description
WB7592	Ball shooter assembly

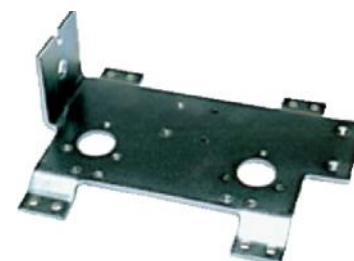 

Flipper Unit Mounting Bracket

- Williams ref: C8231L/R, C9954-L/R, C11627-L/R and B13104-L/R.

Part no.	Description
122P0001	Left
122P0002	Right



Shooter Rod

- Williams ref: 20-9253.

Part no.	Description
530-5023-00	Shooter rod



3" Flipper and Shaft

- Williams ref: 20-9250-XX and A8229.


Part no.	Description
122A0011-9	White flipper
122A0011-4	Yellow flipper



Bushing

- Williams ref: 02-4179.
- For flipper link and assembly 03-8050.

Part no.	Description
515-5097-00	Metal bushing

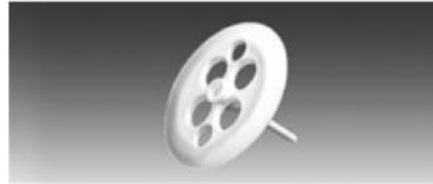 

White Popbumper Skirt

- Williams ref: 3-6035-5.

Part no.	Description
BC790	Popbumper 6 holes



Flipper Ball

- Universal steel flipper ball.
- Williams ref. 20-6500.


Part no.	Description
BM168-26	Steel ball



Popbumper Bracket

- Williams ref: B7417.


Part no.	Description
BA613-114	Bracket

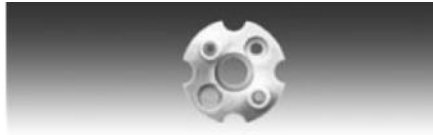 

Popbumper Base

- Williams ref: 3-6009.

Part no.	Description
BC115-1	Bumper base

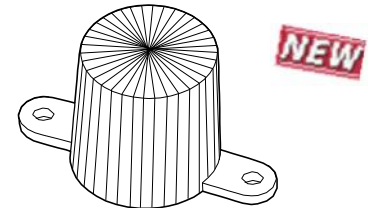 

Pinball Playfield Mini Mars light

- Adds attractive light and colors to any pinball or redemption type game
- Williams Ref. 03-8149-XX
- Sega Ref. 550-5031-XX

COLOUR CODE

XX = Colour

10T = Red	15T = Yellow
12T = Blue	17T = Amber
13T = Green	18 = Clear
14T = Purple	19T = Orange



Ball Popper Cap

- Williams ref: 3A8561.

Part no.	Description
W3A8561	Ball popper cap



Popbumper Body

- Williams ref: 3-7443-5.

Part no.	Description
122C0004	Bumper body

Part no.	Description
H49-5017-XX	Mini Mars light translucent, <i>specify colour</i>



Ball Popper Cap

- Williams ref: 3B7351.
- For ball popper assembly D11335.


Part no.	Description
122C0007	Ball popper cap



Universal Popbumper Cap

- Williams ref: 03-8254.

Part no.	Description
W3A8254-9	Popbumper red

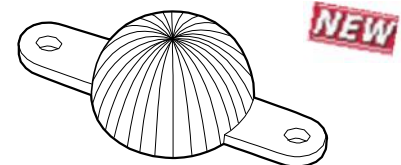

Pinball Playfield Starburst Hat Light

- Adds attractive light and colors to any pinball or redemption type game
- Williams Ref. 03-8662-X
- Sega Ref. 550-5032-XX

COLOUR CODE

XX = Colour

10T = Red	15T = Yellow
12T = Blue	17T = Amber
13T = Green	18 = Clear
14T = Purple	19T = Orange



Popbumper Plunger

- Williams ref: 2-3406-1.

Part no.	Description
122S0001	Plunger



Popbumper Yoke

- Williams ref. metal: 1-5492.
- Williams ref. fibre: 1-5493.

Part no.	Description
122P0006	Metal yoke
122P0007	Fibre yoke



Popbumper Ring and Rod

- Williams ref: A4754.

Part no.	Description
GA1316	Ring and rod

Part no.	Description
H49-5018-XX	Starburst hat light translucent, <i>specify colour</i>



Coil Bracket

- Williams ref: 01-7695.

Part no.	Description
122P005	Coil bracket



Bumper Post

- Williams ref: 03-8044-9.

Part no.	Description
W3A8044-9	Bumper post



Dot Matrix Display 128 x 32

- Used in all models from *Terminator 2 and up.
- Complete with driver board for easy immediate replacement.
- Williams ref: 5901-12784-00.

Part no.	Description
122D002	Dot matrix display



Hex Collar Stud

Part no.	Description
BS2124-1	1-1/2"



Plastic Pion Post

- Available in colours red and blue transparent.
Specify colours.
- Williams ref: 03-8319.

Part no.	Description
GC11562-20	1-3/16" pion post red
GC11561-60	1" pion post blue



Bumper Post

- Williams ref: 2-4056.

Part no.	Description
530-5007-00	Bumper post



3-D Target Wide Actuating Blades

Part no.	Description
22-1087-XX	Actuator (<i>Specify colour</i>)



Hex Collar Stud

- Used with "T" nut BM108-15.

Part no.	Description
BS2125	1-11/16"



Rectifiers 6.3mm Terminals

Part no.	Williams ref.	Description
B400C35000	5A9050	400V 35A



3-D Stand-up Wide Targets

Part no.	Description
22-1090-2	Red target
22-1090-5	Green target
22-1090-9	White target
22-1090-14	Yellow target transparent
22-1090-15	Green target transparent




Post Assembly

Part no.	Description
BS2145	Post
BR206-9	Rubber T-nut



Display Panels

Part no.	Williams ref.	Description
BE680-7	5670-09439-00	7 digits num.

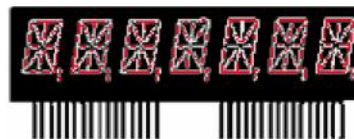 

7 Digits Alpha-Numeric Display

- Williams ref: 5670-10873-00.

Part no.	Description
520-5016-00	7 digits alpha-numeric display



Reset Plate for Target

- With long tip. For single target unit Assy.
- Williams ref: 1-6983.

Part no.	Description
122P0009	Reset plate



3-D Narrow Stand-up Targets

Part no.	Description
22-1091-4	Yellow target
22-1091-5	Green target
22-1091-9	White target
22-1091-14	Yellow target transparent
22-1091-15	Green target transparent



Anti-Slam Switch

- Used on front door.

Part no.	Description
BASW-A20	Anti-slam switch



Flipper Switch

- Williams ref: SW1A192.

Part no.	Description
122SW0011	Flipper switch



Button Switch

- Williams ref: SW1010A11.

Part no.	Description
122SW0021	Button switch



Anti-Slam Switch

Part no.	Description
22-2201-11	Anti-slam switch



End of Stroke Switch

- Williams ref: SW1A193.

Part no.	Description
122SW0012	End of stroke switch



Button Switch

- Williams ref: SW1010A13.

Part no.	Description
122SW0022	Button switch



Stand-up Switch

- Williams ref: SW1A134 and SW1A120.

Part no.	Description
122SW0001	Stand-up switch



Flipper Switch

- Williams ref: SW1A70.

Part no.	Description
122SW0013	Flipper switch



Switch

- Williams ref: SW2010A.

Part no.	Description
122SW0023	Switch



Eject Hole Switch

- Williams ref: SW1A130.

Part no.	Description
122SW0005	Eject hole switch



Button Switch

- Williams ref: SW10A44.

Part no.	Description
122SW0016	Button switch



Flipper Switch

- Williams ref: SW10A50.

Part no.	Description
122SW0025	Flipper switch



Ball Runway Switch

- Williams ref: SW1A136.

Part no.	Description
122SW0007	Ball runway switch



Flipper Button Switch

- Williams ref: SW10A48.

Part no.	Description
122SW0018	Flipper button switch



Popbumper Switch

- Williams ref: SW11A35.

Part no.	Description
122SW0026	Popbumper switch



Lane Change Switch

- Williams ref: SW1A139 and SW1A150.

Part no.	Description
122SW0009	Lane change switch



Flipper End Switch

- Williams ref: SW10A50.

Part no.	Description
122SW0019	Flipper end switch



End of Stroke Switch

- Williams ref: SW10A8 and 3-7811.

Part no.	Description
BASW-A20-7	End of stroke switch



Flipper Switch

- Williams ref: SW1A191.

Part no.	Description
122SW0010	Flipper switch



Ball Popper Switch

- Williams ref: A11657 and SW1A167.

Part no.	Description
180-5041-00	Ball popper switch



Switch

- Williams ref: SW11A37.

Part no.	Description
122SW0027	Switch